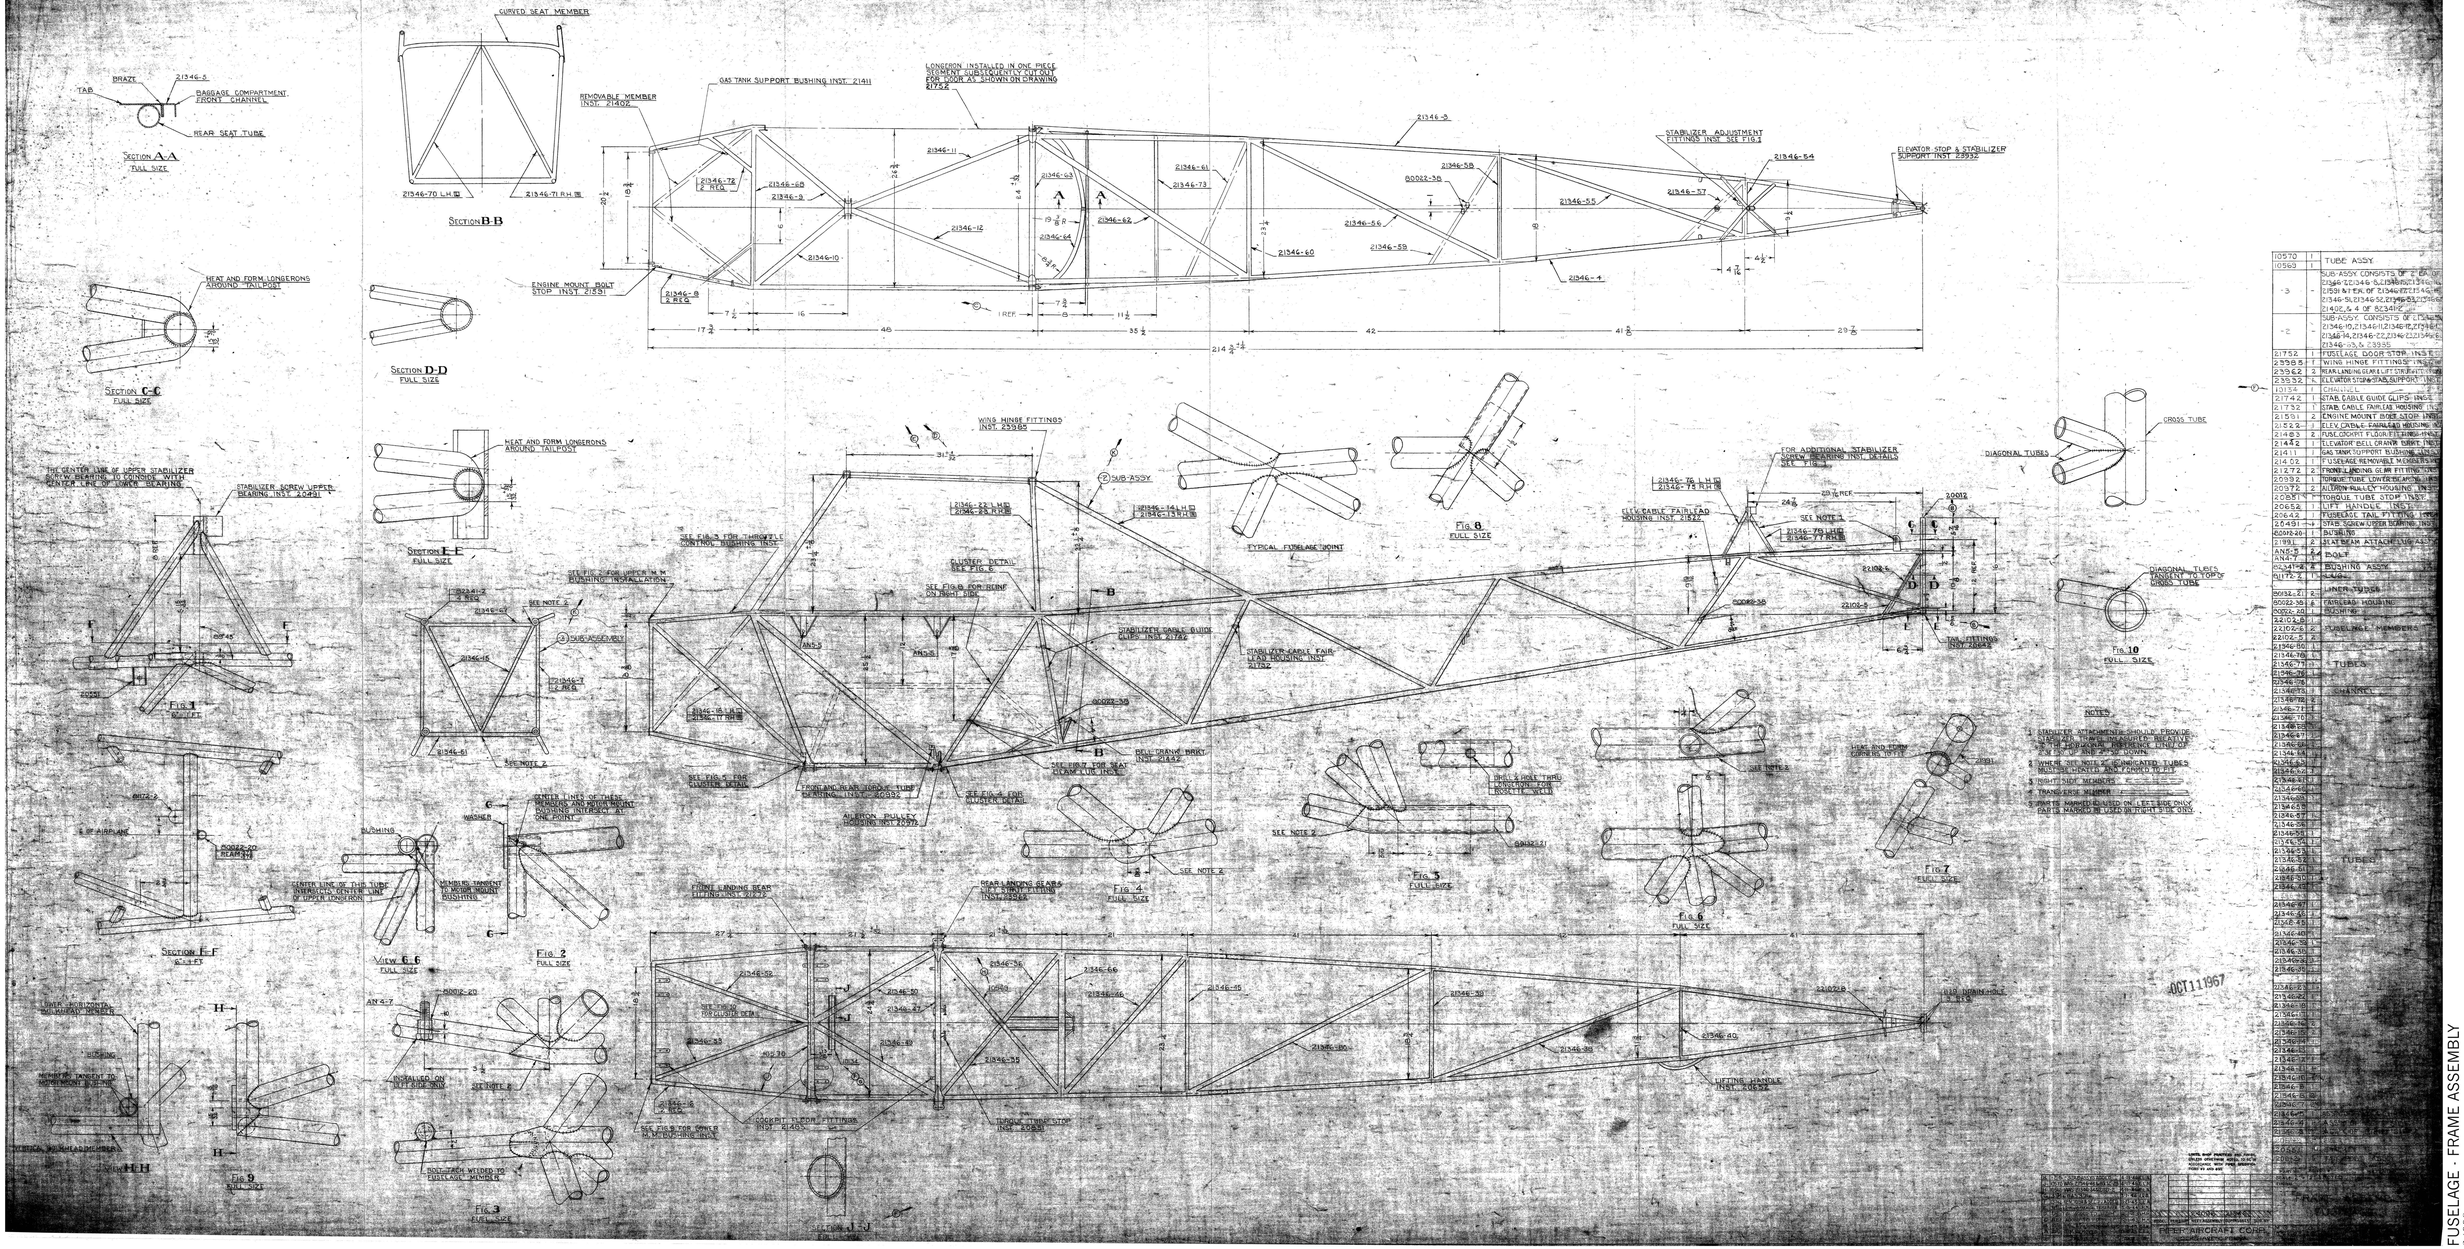

10570	1	TUBE ASSY
10569	1	
-3	-	SUB-ASSY CONSISTS OF 2 EA. OF 21346-12, 21346-64, 21346-63, 21346-62, 21346-61, 21346-60, 21346-59, 21346-58, 21346-57, 21346-56, 21346-55, 21346-54, 21346-53, 21346-52, 21346-51, 21346-50, 21346-49, 21346-48, 21346-47, 21346-46, 21346-45, 21346-44, 21346-43, 21346-42, 21346-41, 21346-40, 21346-39, 21346-38, 21346-37, 21346-36, 21346-35, 21346-34, 21346-33, 21346-32, 21346-31, 21346-30, 21346-29, 21346-28, 21346-27, 21346-26, 21346-25, 21346-24, 21346-23, 21346-22, 21346-21, 21346-20, 21346-19, 21346-18, 21346-17, 21346-16, 21346-15, 21346-14, 21346-13, 21346-12, 21346-11, 21346-10, 21346-9, 21346-8, 21346-7, 21346-6, 21346-5, 23385
-2	-	SUB-ASSY CONSISTS OF 1 EA. OF 21346-12, 21346-64, 21346-63, 21346-62, 21346-61, 21346-60, 21346-59, 21346-58, 21346-57, 21346-56, 21346-55, 21346-54, 21346-53, 21346-52, 21346-51, 21346-50, 21346-49, 21346-48, 21346-47, 21346-46, 21346-45, 21346-44, 21346-43, 21346-42, 21346-41, 21346-40, 21346-39, 21346-38, 21346-37, 21346-36, 21346-35, 21346-34, 21346-33, 21346-32, 21346-31, 21346-30, 21346-29, 21346-28, 21346-27, 21346-26, 21346-25, 21346-24, 21346-23, 21346-22, 21346-21, 21346-20, 21346-19, 21346-18, 21346-17, 21346-16, 21346-15, 21346-14, 21346-13, 21346-12, 21346-11, 21346-10, 21346-9, 21346-8, 21346-7, 21346-6, 21346-5, 23385
21752	1	FUSELAGE DOOR STOP INST.
23385	1	WING HINGE FITTINGS INST.
23562	2	REAR LANDING GEAR LEFT STRUT FAIT.
23552	2	ELEVATOR STOP & STAB. SUPPORT INST.
10154	1	CABLE ASSY
21742	1	STAB. CABLE GUIDE CLIPS INST.
21752	1	STAB. CABLE FAIRLEAD HOUSING INST.
21591	2	ENGINE MOUNT BOLT STOP INST.
21562	1	ELEV. CABLE FAIRLEAD HOUSING INST.
21483	2	FUSE. CONSTR. FLOOR FITTING INST.
21442	1	ELEVATOR BELL CRANK BRKT. INST.
21411	1	GAS TANK SUPPORT BUSHING INST.
21402	1	FUSELAGE REMOVABLE MEMBER INST.
21272	2	FRONT LANDING GEAR FITTING INST.
20892	1	TORQUE TUBE LOWER BEARING INST.
20872	2	AILERON PULLEY HOUSING INST.
20851	1	TORQUE TUBE STOP INST.
20652	1	LIFT HANDLE INST.
20642	1	FUSELAGE TAIL FITTING INST.
20491	1	STAB. SCREW UPPER BEARING INST.
6009-20	1	BUSHING
21781	2	SEAT BELT ATTACHMENT ASSY.
AN3-5	24	BOLT
AN4-7	4	BOLT
MS24478	4	BUSHING ASSY.
NUT12-2	2	NUT
		INNER TUBES
50032-21	2	
50022-35	6	FAIRLEAD HOUSING
50022-20	1	BUSHING
22102-5	2	
22102-6	2	FUSELAGE MEMBERS
22102-7	2	
21346-50	1	
21346-76	1	TUBES
21346-75	1	
21346-74	1	CHANNEL
21346-73	1	
21346-72	2	
21346-71	1	
21346-70	1	
21346-69	1	TUBES
21346-68	1	
21346-67	1	
21346-66	1	
21346-65	1	
21346-64	1	
21346-63	1	
21346-62	1	
21346-61	1	
21346-60	1	
21346-59	1	
21346-58	1	
21346-57	1	
21346-56	1	
21346-55	1	
21346-54	1	
21346-53	1	
21346-52	1	
21346-51	1	
21346-50	1	
21346-49	1	
21346-48	1	
21346-47	1	
21346-46	1	
21346-45	1	
21346-44	1	
21346-43	1	
21346-42	1	
21346-41	1	
21346-40	1	
21346-39	1	
21346-38	1	
21346-37	1	
21346-36	1	
21346-35	1	
21346-34	1	
21346-33	1	
21346-32	1	
21346-31	1	
21346-30	1	
21346-29	1	
21346-28	1	
21346-27	1	
21346-26	1	
21346-25	1	
21346-24	1	
21346-23	1	
21346-22	1	
21346-21	1	
21346-20	1	
21346-19	1	
21346-18	1	
21346-17	1	
21346-16	1	
21346-15	1	
21346-14	1	
21346-13	1	
21346-12	1	
21346-11	1	
21346-10	1	
21346-9	1	
21346-8	1	
21346-7	1	
21346-6	1	
21346-5	1	